


Cello Products - Engineering Data

Copper Water Tube Standard Dimensions & Weights


Nominal Tube Sizes Inches	Outside Dia., In. Types K-L-M-DWV	Inside Diameter, Inches				Wall Thickness, Inches				Pounds Per Linear Foot			
		Type K	Type L	Type M	Type DWV	Type K	Type L	Type M	Type DWV	Type K	Type L	Type M	Type DWV
1/4	.375	.305	.315	-	-	.035	.030	-	-	.145	.126	-	-
3/8	.500	.402	.440	.450	-	.049	.035	.025	-	.269	.198	.145	-
1/2	.625	.527	.545	.569	-	.049	.040	.028	-	.344	.285	.204	-
5/8	.750	.652	.666	-	-	.049	.042	-	-	.418	.362	-	-
3/4	.875	.745	.811	-	-	.065	.045	.032	-	.641	.455	.328	-
1	1.125	.995	1.025	1.055	-	.065	.050	.035	-	.839	.655	.465	-
1 1/4	1.375	1.245	1.265	1.291	1.295	.065	.055	.042	.040	1.04	.884	.682	.650
1 1/2	1.625	1.481	1.505	1.527	1.541	.072	.060	.049	.042	1.36	1.14	.940	.809
2	2.125	1.959	1.985	2.009	2.041	.083	.070	.058	.042	2.06	1.75	1.46	1.07
2 1/2	2.625	2.435	2.465	2.495	-	.095	.080	.065	-	2.93	2.48	2.03	-
3	3.125	2.907	2.945	2.981	3.035	.109	.090	.072	.045	4.00	3.33	2.68	1.69
3 1/2	3.625	3.385	3.425	3.459	-	.120	.100	.083	-	5.12	4.29	3.58	-
4	4.125	3.857	3.905	3.935	4.009	.134	.110	.095	.058	6.51	5.38	4.66	2.87
5	5.125	4.805	4.875	4.907	4.981	.160	.125	.109	.072	9.67	7.61	6.66	4.43
6	6.125	5.741	5.845	5.881	5.959	.192	.140	.122	.083	13.9	10.2	8.92	6.10
8	8.125	7.583	7.725	7.785	7.907	.271	.200	.170	.109	25.9	19.3	16.5	10.6

Dimensions of Solder Joint Ends - Drainage Fittings

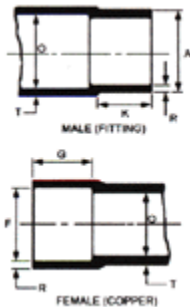

Cast-Copper Alloy Solder Joint DWV Fittings

Size	Male End (fitting end)		Length K	Female End (copper end)			Metal Thickness +/- 10%		Inside Diameter Of Fitting O Min.
	Outside Diameter A	Length K		Inside Diameter F	Depth G	Body T	Joint R		
								Min.	
1 1/4	1.372	1.377	0.44	1.378	1.382	0.38	0.10	0.07	1.29
1 1/2	1.621	1.627	0.50	1.628	1.633	0.44	0.10	0.07	1.53
2	2.121	2.127	0.56	2.128	2.133	0.50	0.10	0.09	2.01
3	3.121	3.127	0.81	3.128	3.133	0.75	0.12	0.10	2.98
4	4.121	4.127	1.06	4.128	4.133	1.00	0.12	0.12	3.93
5	5.121	5.127	1.31	5.128	5.133	1.25	0.19	0.19	4.91
6	6.121	6.127	1.62	6.128	6.133	1.50	0.19	0.19	5.88
8	8.119	8.127	2.12	8.128	8.133	2.00	0.22	0.22	7.78

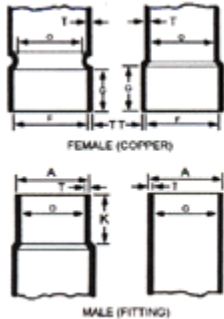


Wrought Copper and Copper Alloy Solder Joint DWV Fittings

Size	Male End (fitting end)		Length K	Female End (copper end)			Metal Thickness Joint T Min.	Inside Diameter Of Fitting O Min.
	Outside Diameter A	Length K		Inside Diameter F	Depth G			
						Min.		
1 1/4	1.372	1.377	0.44	1.378	1.382	0.38	0.040	1.29
1 1/2	1.621	1.627	0.50	1.628	1.633	0.44	0.042	1.53
2	2.121	2.127	0.56	2.128	2.133	0.50	0.042	2.01
3	3.121	3.127	0.81	3.128	3.133	0.75	0.045	2.98
4	4.121	4.127	1.06	4.128	4.133	1.00	0.058	3.93


Dimensions of Solder Ends - Pressure Fittings

Wrought-Copper and Wrought-Copper Alloy Solder Joint Pressure Fittings

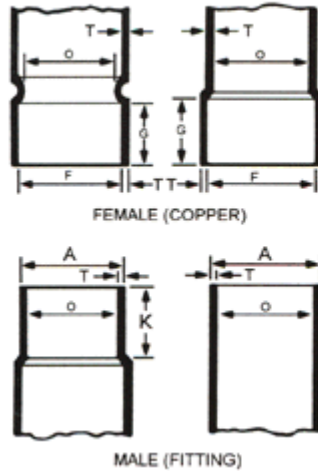

Standard Water Tube Size	Male End (fitting end)			Female End (copper end)			Metal Thickness		Inside Dia. Of Fitting O Min.
	Outside Diameter A		Length K	Inside Diameter F		Depth G	T	R	
	Min.	Max.	Min.	Min.	Max.	Min.	Min.		
1/8	0.248	0.251	0.31	0.252	0.256	0.25	0.019		0.18
1/4	0.373	0.376	0.38	0.377	0.381	0.31	0.023		0.30
3/8	0.497	0.501	0.44	0.502	0.506	0.38	0.026		0.39
1/2	0.622	0.626	0.56	0.627	0.631	0.50	0.029		0.52
5/8	0.747	0.751	0.69	0.752	0.756	0.62	0.031		0.63
3/4	0.872	0.876	0.81	0.877	0.881	0.75	0.033		0.74
1	1.122	1.127	0.97	1.128	1.132	0.91	0.040		0.98
1 1/4	1.372	1.377	1.03	1.378	1.382	0.97	0.044		1.23
1 1/2	1.621	1.627	1.16	1.628	1.633	1.09	0.051		1.47
2	2.121	2.127	1.41	2.128	2.133	1.34	0.059		1.94
2 1/2	2.621	2.627	1.53	2.628	2.633	1.47	0.067		2.42
3	3.121	3.127	1.72	3.128	3.133	1.66	0.075		2.89
3 1/2	3.621	3.627	1.97	3.628	3.633	1.91	0.086		3.37
4	4.121	4.127	2.22	4.128	4.133	2.16	0.096		3.84
5	5.121	5.127	2.72	5.128	5.133	2.66	0.111		4.70
6	6.121	6.127	3.22	6.128	6.133	3.09	0.124		5.72
8	8.119	8.127	4.09	8.128	8.133	3.97	0.173		7.55

Cast Copper Alloy Solder Joint Pressure Fittings

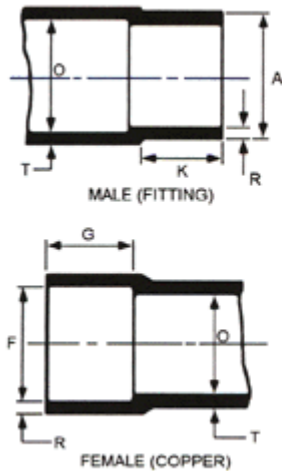

Standard Water Tube Size	Male End (fitting end)			Female End (copper end)			Metal Thickness +/- 10%		Inside Dia. Of Fitting O Min.
	Outside Diameter A		Length K	Inside Diameter F		Depth G	Body T	Joint R	
	Min.	Max.	Min.	Min.	Max.	Min.			
1/4	0.373	0.376	0.38	0.377	0.381	0.31	0.08	0.05	0.31
3/8	0.497	0.501	0.44	0.502	0.506	0.38	0.09	0.05	0.43
1/2	0.622	0.626	0.56	0.627	0.631	0.50	0.09	0.05	0.54
3/4	0.872	0.876	0.81	0.877	0.881	0.75	0.10	0.06	0.78
1	1.122	1.127	0.97	1.128	1.132	0.91	0.11	0.07	1.02
1 1/4	1.372	1.377	1.03	1.387	1.382	0.97	0.12	0.07	1.26
1 1/2	1.621	1.627	1.16	1.628	1.633	1.09	0.13	0.08	1.50
2	2.121	2.127	1.41	2.128	2.133	1.34	0.15	0.09	1.98
2 1/2	2.621	2.627	1.53	2.628	2.633	1.47	0.17	0.10	2.46
3	3.121	3.127	1.72	3.128	3.133	1.66	0.19	0.11	2.94
3 1/2	3.621	3.627	1.97	3.628	3.633	1.91	0.20	0.12	3.42
4	4.121	4.127	2.22	4.128	4.133	2.16	0.22	0.13	3.90
5	5.121	5.127	2.72	5.128	5.133	2.66	0.28	0.17	4.87
6	6.121	6.127	3.22	6.128	6.133	3.09	0.34	0.20	5.84
8	8.119	8.127	4.09	8.128	8.133	3.97	0.38	0.31	7.72
10	10.119	10.127	4.12	10.128	10.133	4.00	0.48	0.48	9.62
12	12.119	12.127	4.62	12.128	12.133	4.50	0.56	0.56	11.56

Cello Products Inc

Product Specifications

Cello Products Inc. certifies that it manufactures all its cast brass and wrought copper solder joint fittings to the general specifications outlined in the following:

Wrought Copper and Copper Alloy Solder Joint Pressure Fittings: ASME/ANSI std. B16.22 – 2001
Cast Copper Alloy Solder Joint Pressure Fittings: ASME/ANSI Std. B16.18 – 2001
Wrought Copper and Wrought copper Alloy solder Joint Drainage Fittings -- DWV ASME/ANSI Std. B16.29 – 2001
Cast Copper Alloy Solder Joint Drainage Fittings: ASME/ANSI Std. B16.23 – 2001
Bronze Pipe Flanges and Flanged Fittings: ASME/ANSI Std. 16.24 – 2001
Cast Bronze Threaded Fittings: ASME/ANSI Std. B16.15 – 1985
Wrought Copper LW Solder Joint Pressure Fittings: MSS SP-104 – 1990
Cast Copper Alloy Flanges and Flanged Fittings Class 125, 150, 300: MSS SP-106 – 1990

Cello further certifies that the materials used to manufacture these fittings are made in compliance with the following industry standards:

Tubular Wrought Copper:
Standard Specification for Seamless Copper Tube: ASTM B75 Alloy C12200

Products Made From Sheet:
Standard Specification for copper sheet, Strip, Plat and Rolled Bar: ASTM B152 Alloy C11000

Cast Products:
Standard Specification for Copper Alloy Sand Castings for General Applications; Federal Specification WW-U-516 for Type III, Class A and B Copper Alloy Unions: ASTM B584 Alloy C84400

All Cello Products Inc. wrought copper fittings are NSF61 registered.

All Cello Products Inc. pressure fittings have Canadian registration Numbers (CRN).

0A4925.5C - Pressure pipe fittings

0B4925.5C - Flanges

Cello Products Inc

Soldering & Brazing Copper Tube

Soldering and Brazing with capillary solder joint fittings is the most common system for joining copper tube.

In actual practice, most soldering is done at temperatures of about 350 to 550 degrees F, while brazing is done at temperatures ranging from 1100 to 1550 degrees F.

The theory of soldering and brazing is the same for all diameters. Basically, when two metal surfaces are close to one another as copper tube is when coupled into a fitting, liquid metal will be drawn into the gap by "capillary" action. In normal copper systems the gap will be between 0.0005" and 0.005". However, capillary action will occur in up to 0.010" gaps.

Basic Steps in the Joining Process:

Measuring - Measuring the length of the tube must be accurate since it is imperative that the copper tube fit to the end of the socket in the fitting in order for the strongest joint to be made.

Cutting - Cutting the tube can be accomplished in a number of ways to produce a satisfactory, square-end cut. The tube can be cut with a disc type tube cutter, a hacksaw, abrasive wheel, or on a bandsaw. Care must be taken that the tube is not significantly deformed while being cut.

Reaming - Most methods of cutting leave a small burr on the end of the tube which must be removed since erosion-corrosion may occur due to local turbulence and increased velocities in the tube. Tools used to ream tube ends include the reaming blade on the tube cutter, files, a pocket knife, or a suitable deburring tool.. With soft tube, care must be taken not to get the tube end out-of-round by applying too much pressure. Both the inside and the outside of the tube may require removal of the burr.

Cleaning - Cleaning the outside of the tube and the fitting socket is crucial to a good joint. The removal of oxides and surface soil is necessary if filler metal is to flow properly and form intermetallic bonds with the two metal surfaces. Oxides, surface soil and oil can interfere with the strength of the joint and this can result in the joint's failure. Mechanical cleaning is a simple operation. The end of the tube can be cleaned using sand cloth or nylon abrasive pads for a distance only slightly more than the depth of the fitting socket. The socket of the fitting should also be cleaned using sand cloth, abrasive pads, or properly sized fitting wire brushes.

Copper is a soft metal; if too much material is removed, a loose fit will result and interfere with satisfactory capillary action in making the joint. Chemical cleaning may be utilized, providing the tube and fittings are thoroughly rinsed, according to the manufacturer's recommendations furnished with the cleaner. This will help neutralize any acidic conditions that may exist. The surfaces, once cleaned, should not be touched with bare hands or oily gloves. Skin oils, lubricating oils and grease impair solder flow and wetting of the metal surfaces.

Temperature Ranges:

The choice for soldering or brazing will depend upon operating conditions. Solder joints are generally used where the system temperatures do not exceed 250 degrees F and brazed joints can be used where greater strengths are required (i.e.. high internal pressure), or where system temperatures are as high as 350 degrees F.

Soldering:

Applying flux (a non-aggressive soldering flux) is recommended. Stir the flux before use. Flux is designed to remove residual oxides from the surfaces to be joined, protect the surfaces from re-oxidation during heating and promote the wetting of the surfaces by the liquid solder. A thin, even coating of flux should be applied with a brush to both tube and fitting. The use of fingers to apply flux should be avoided as chemicals in the flux can be harmful if carried to the eyes or open cuts.

Types of solder - There are a variety of solders available that will produce sound, leak-tight joints. Solders that are used for piping applications generally contain tin and varying amounts of either antimony, copper, lead or silver. For potable water systems, solders which do not contain lead are mandatory.

Assembly - After both surfaces are properly cleaned and fluxed, they should be assembled by placing the fitting on the tube, making sure the tube seats against the base of the fitting socket. A slight twisting motion is suggested to ensure even coverage by the flux. Remove excess flux with a rag. Because of the heat that is required during soldering and brazing, only cotton rags should be used. Complete all prepared joints within a single work day. Care must be taken to assure that the tube and fittings are properly supported with a uniform capillary space around the entire circumference of the joint. Uniformity of capillary space will ensure good filler metal penetration if the guidelines of successful joint making are followed. Excessive joint clearance can cause the filler metal to crack under stress or vibration.

Heating - Because of the open flame and high temperatures required for soldering and the flammability of the gases used, safety precautions must be observed. The heat is generally applied by use of an air/fuel torch. These torches can use acetylene or a variety of LP gases. Electric resistance pliers can also be used.

Heating should begin with the flame perpendicular to the tube. This preheat will conduct the initial heat into the socket for even distribution of heat inside and out. Preheating time depends upon the diameter of the joint --- experience will indicate the proper amount of time. Next, move the flame onto the fitting socket then alternate the flame from the fitting socket back onto the tube a distance equal to the fitting socket. Touch the solder to the joint. If the solder does not melt, remove it and continue the heating process. Be careful not to overheat or direct the flame into the fitting socket. This action can cause the flux to burn and destroy its effectiveness. When the melting temperature has been reached, heat may be applied to the base of the socket to aid capillary action in drawing the solder into the socket.

Applying Solder - When the tube is in a horizontal position, start applying the solder slightly off-center of the bottom of the joint. Proceed across the bottom of the fitting and up to the top-center position. Return to the point of beginning, overlap the starting point and then proceed up the uncompleted side to the top. Again, overlapping the solder. Molten solder will be drawn into the joint by capillary action regardless if the solder is being fed upward, downward or horizontally.

Cooling and Cleaning - After the joint has been made, natural cooling is best. Shock cooling may cause unnecessary stresses on the joint and may result in eventual failure. Once the fitting is cool, clean off any remaining flux with a wet rag.

Brazing:

Applying Flux - The fluxes used for brazing copper joints are different in composition from soldering fluxes. They cannot, and should not, be used interchangeably. Brazing fluxes are water based. Similar to soldering fluxes, brazing fluxes remove residual oxides from the metal surfaces; they protect the metal surfaces from re-oxidation during heating and they promote the wetting of the surfaces to be joined by the brazing filler metal. Application of the flux is the same as when soldering. If the outside of the fitting and the heat affected area of the tube are covered with flux, it will prevent oxidation and greatly improve the appearance of the joint.

Brazing Filler Materials - There are two general types of brazing filler metals used for joining copper tube. BCuP (Brazing - Copper - Phosphorous) and BAg (Brazing - Silver). These brazing filler metals are classified according to their components.

BCuP filler metals are preferred for joining copper tube and fittings. The phosphorous in these filler metals acts as a fluxing agent and the lower percentage of silver makes them relatively low cost filler metals. When using copper tube, wrought copper fittings and BCuP brazing filler metal, fluxing is an option due to the self-fluxing action of the phosphorous present in all components of the brazed joint.

The choice of brazing filler metals depends upon four main factors:

- dimensional tolerance of the joint
- type and material of fitting (cast or wrought)
- desired appearance
- cost

Heating - Oxy/fuel torches are generally used when brazing because of the higher temperatures required. Due to recent innovations in air/fuel torch tip design, they can now be used on a wider variety of sizes for soldering and brazing.

When working with temperatures this high, safety precautions must be followed and care taken to protect both the operator and the materials being used. The heating operation is the same as for soldering. First preheat the tube and then the tube and fitting socket. When the brazing filler metal starts to melt, apply the heat at the base of the fitting socket to help draw the brazing filler metal in by capillary action.

Applying Brazing Filler Metal - Remember to allow the heat of the joint to melt the filler metal. Do not melt the filler metal with the torch. The melted filler metal will be drawn into the joint by capillary action. It is very important that the flame be in continuous motion and should not be allowed to remain on any one point long enough to burn through the tube or fitting. When the joint is complete, a continuous filler should be visible completely around the joint. If the filler metal fails to flow or has the tendency to ball-up, it indicates oxidation on the metal surfaces or insufficient heat on the parts to be joined. If the filler metal refuses to enter the joint and tends to flow over the outside of either part of the joint, it indicates that this part is overheated or that the other part is underheated.

Cooling and Cleaning - When the joint is complete, allow it to cool naturally. Flux residues can be removed by washing with hot water and brushing with a stainless steel wire brush.

Summary:

If the parts to be joined are properly prepared, properly heated and the correct filler metal is used, the finished joint should be sound. Soldered or brazed copper piping systems, when installed properly, will provide years of safe and reliable service. Proper training of the correct installation techniques, such as those just covered, will give the craftsman the ability to achieve consistently reliable soldered and brazed joints in all diameters.

The Copper Development Association : <http://www.copper.org/>